

Choose Your Storage Option



Cam Cync Cloud Storage

 
Your camera comes with a free trial of our premium Cloud video storage solution. Your video will be stored in our secure Cloud, accessed by two-factor authentication.



SD Drive

Store all of your content locally on a microSD card (sold separately) using the camera's built in microSD card slot.

Get to Know Your Camera

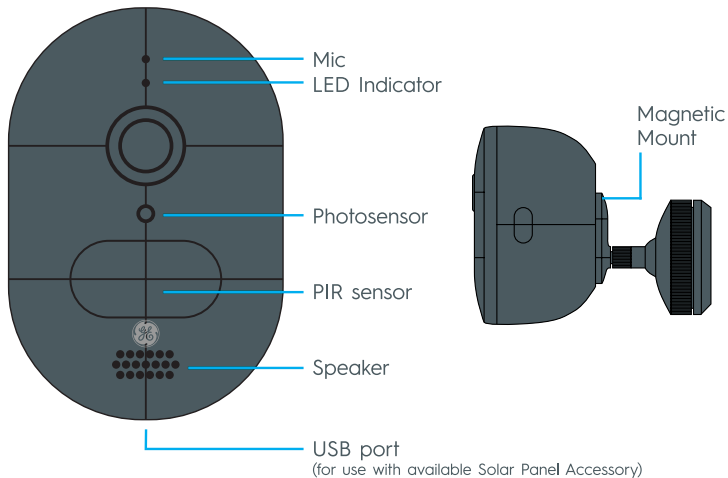

Outdoor Camera Accessories

Keep your camera continually powered with optional accessories (sold separately)

Solar Panel

Easy to install and keeps your camera constantly powered.



 
Rechargeable Battery

Keep a second battery charged and never miss a moment.




Installing the MicroSD Card & Resetting Your Camera

Remove the back cover to locate the reset hole, MicroSD card slot and access the rechargeable battery.

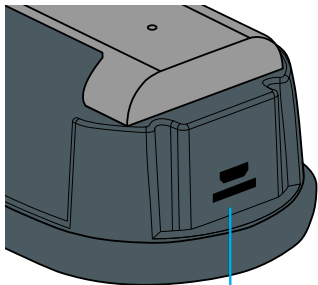

MicroSD Slot

 Insert MicroSD card (sold separately) until it clicks. Gently push the card to release.

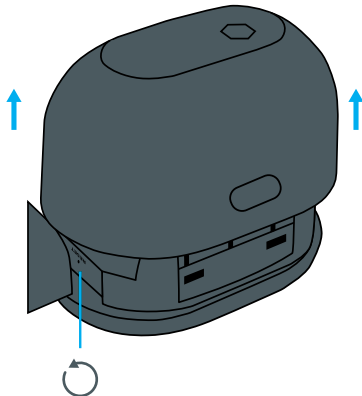

Reset Hole

Insert pin into hole and hold for 3 seconds to reset camera.

GE is a trademark of General Electric Company. Used under trademark license.